


# Installation Instruction Manual

MON-9600

Monitoring  
System

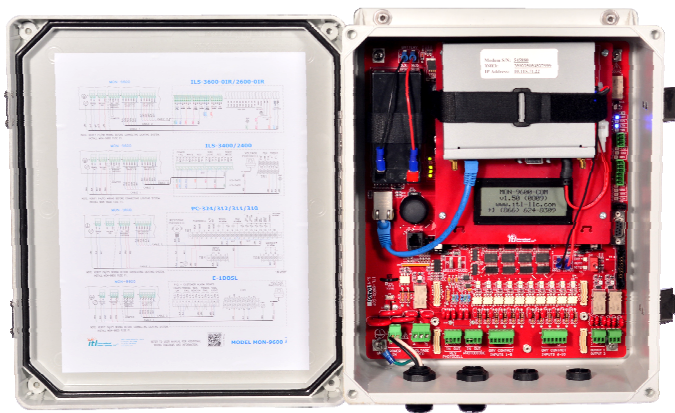

Toll Free: +1 (866) 624-8309 • [www.itl-llc.com](http://www.itl-llc.com)

**itl** International  
Tower Lighting, LLC™

## Front Matter

### Copyright & Trademarks

Copyright © 2018 by ITL, LLC. All rights reserved. This document contains proprietary information, photographs, graphics, and other material (collectively, "the Content") protected by copyright, and this manual and all accompanying hardware, software and documentation are copyrighted. No part of this document may be photocopied or reproduced by mechanical, electronic, or other means in any form without written consent of ITL, LLC.

*"International Tower Lighting, LLC", "ITL, LLC", MON-9600, ADP OnSite, ADP Lite, ADP Standard, and ADP Enterprise, and the ITL logo* are all trademarks of ITL, LLC. All other trademarks and brand names are the property of their respective proprietors.

### Limited Warranty and Disclaimer

ITL, LLC guarantees that every MON-9600 monitoring system is free from physical defects of material and workmanship under normal use for one (1) year from the date of purchase. If the product proves defective during this warranty period, please contact ITL, LLC in order to obtain a Return Authorization Number, RMA.

In no event shall ITL, LLC's liability exceed the price paid for the product from direct, indirect, special, incidental, or consequential damages resulting from the use of the product, its accompanying software, or its documentation. ITL, LLC makes no warranty or representation, expressed, implied, or statutory, with respect to its products or the contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose unless otherwise stated.

The technical documentation is being delivered to you AS-IS. ITL, LLC makes no warranty as to its accuracy or use. Any use of the technical documentation or the information contained therein is at the risk of the user. Documentation may include technical or other inaccuracies or typographical errors. ITL, LLC reserves the right to revise or update its products, software, or documentation without obligation to notify any individual or entity.

Please send any comments regarding the manual to [support\\_doc@itl-llc.com](mailto:support_doc@itl-llc.com).

## Safety Warning



This equipment uses lethal voltages which can cause serious injury and/or death. Do not attempt to service this equipment with line power applied.

Never rely on just one switch to power down a high voltage supply. Measure for voltages using a voltmeter to ensure that power is off and has been completely removed.

Do not wear any jewelry when servicing this equipment. Gold and silver are excellent conductors of electricity.

## Battery Warning and Disposal

There is danger of explosion if the included sealed lead-acid battery is replaced incorrectly. Only replace the battery with the same or equivalent type recommended by the battery manufacturer. Dispose of used batteries according to the battery manufacturer's instructions.

Do not incinerate, disassemble, or puncture the battery.

For questions or details please contact The Battery Council International at (312) 664-6610, or your local waste agency.

## Table of Contents

Front Matter .....	2
Copyright & Trademarks .....	2
Limited Warranty and Disclaimer .....	2
Safety Warning .....	3
Battery Warning and Disposal .....	3
List of Illustrations and Tables .....	6
Introduction .....	7
Specifications .....	9
Environment .....	9
Mechanical .....	9
Enclosure .....	9
Electrical .....	9
Model: MON-9600-000 .....	9
Model: MON-9600-24V (Option Available Upon Request) .....	9
Communication Module .....	9
Installation .....	10
Unpacking your Monitoring System .....	10
Tools for Installation .....	10
Quick Installation Guide .....	11
Mounting Enclosure Panel .....	12
Mounting Details for the Enclosure Panel .....	12
Circuit Board .....	13
1. ITL-9600 Circuit Board Assembly .....	13
A. Ethernet connection .....	14
B. Battery connection .....	14
C. Digi Modem Connection .....	14
2. LED Indicators .....	15
A. Mode .....	15
B. Inputs and Output Relays .....	16
C. Indicator Function .....	16
Input Connections .....	16
Web Pages .....	17
Alarm Page .....	17
Mode/PEC .....	18
Configuration – Monitoring Panel .....	19
Configuration – Input Assignments .....	19
Configuration - Custom Input Definitions .....	20
IP Settings - Network .....	20
SNMP Configuration .....	21
SNMP .....	22
MIB .....	22
1. Object Identifiers (OIDs) and Names .....	23
System OIDs .....	23



Product OIDs .....	23
Alarm OIDs .....	24
Installation Diagrams .....	25
ILS-1700-CAT Triple Beacon Wiring Diagram .....	25
ILS-1700-CAT Five Beacon Wiring Diagram .....	26
Quick Info Card Wiring Diagram .....	27
Contact Info .....	28
RMA.....	28

## List of Illustrations and Tables

Figure 1: Mounting Details and Dimensions of Enclosure Panel .....	12
Figure 2: ITL-9600 Circuit Board .....	13
Figure 3: ITL-9600 Ethernet Connection .....	14
Figure 4: ITL-9600 Battery Connection .....	14
Figure 5: ITL-9600 Wireless Modem Connection .....	14
Figure 6: ITL-9600 Communication Status LEDs .....	15
Figure 7: ITL-9600 Dry Contact Input LEDs, Output Relays & LEDs .....	16
Figure 8: ITL-9600 Connections .....	16
Figure 9: Web Browser Address Bar .....	17
Figure 10: Alarms Page.....	17
Figure 11: Mode/PEC Page .....	18
Figure 12: IP Settings – Network Page .....	20
Figure 13: IP Settings - SNMP .....	21
Figure 14: SNMP Verbose Trap .....	21
Figure 15: System OIDs .....	23
Figure 16: Product OIDs.....	23
Figure 17: Trap Setup OIDs .....	24
Figure 18: Alarm OIDs.....	24
Figure 19: ILS-1700-CAT Triple Beacon Wiring Diagram.....	25
Figure 20: ILS-1700-CAT Five Beacon Wiring Diagram.....	26

## Introduction

Congratulations, and thank you for choosing an ITL monitoring system.

We trust that ITL's reputation for technical excellence, experience in product development, commitment to our customers and testing will ensure your complete satisfaction.

You have chosen one of the most technologically innovative monitoring systems for monitoring tower lighting systems available on the market today. This product is the result of many years of engineering with extensive input from field service personnel.

This manual covers both, the MON-9600-000 hardwired Ethernet based system and wireless monitoring system.

Please take the time to read and familiarize yourself with this manual. It contains the information necessary to install, test and troubleshoot the MON-9600 monitoring system.

## Product Description

ITL's MON-9600 systems are designed to provide complete monitoring solutions for all types of tower lighting systems. The monitoring system's rich set of features is directly applicable to monitoring any type of strobe lighting system and red light controller system.

All MON-9600 controllers are SNMP enabled and support SNMP v1 and SNMP v2c capabilities to allow for M2M communication. Additionally, the system has built-in web pages to provide a more intuitive human interface and is supported by most web browsers. The web pages include pre-defined templates for the most common tower lighting configurations for quick and reliable installation.

The MON-9600 systems have ten dry-contact inputs for monitoring tower lighting system's alarm and status relays as well as door switches, generators and other equipment suitable for dry-contact monitoring. The tower lighting system's photocell is monitored and may be over-ridden remotely when needed. Resistive, Photodiode and 120VAC powered photocells are supported. The MON-9600 systems are pre-cabled for up to five dry-contact inputs and battery backup is included as a standard feature.

Both, hardwired Ethernet connection and wireless modem communication are supported.

Typical wireless applications include the use of a secure software tunnel provided by a third party for communication between the MON-9600 (Agent) equipment and network management system (NMS) or SNMP manager.

## Specifications

### Environment

Temperature	-40°C to +55°C
Humidity	less than 95% relative humidity (non-condensing)

### Mechanical

#### Enclosure

Dimension	Height:	13.56" (344mm)
	Width:	11.43" (291mm)
	Depth:	5.21" (132mm)
Weight		10 lbs (4.08Kg) max

### Electrical

#### Model: MON-9600-000

Input Power	120/240VAC at 60Hz, 12VA (max.)
Suppression	45 Joule, 275V, Input Power, Photocell
	23 Joule, 275V, Dry Contact Inputs
Relay Outputs	120/230 VAC, 1 Amp, Form-C

#### Model: MON-9600-24V (Option Available Upon Request)

Input Power	24VDC
Suppression	23 Joule, 275V, Dry Contact Inputs
Relay Outputs	120/230 VAC, 1 Amp, Form-C

### Communication Module

Digi WR21  
Digi WR11

## Installation

The following section describes how to install the MON-9600 series monitoring system. Based on the type of system you are going to install please refer to the appropriate wiring diagram in section *Wiring Diagrams*.

### Unpacking your Monitoring System

Please examine the shipping containers and their content thoroughly upon receipt and report any potential shipping damage to the carrier.

### Tools for Installation

The following tools are suggested for mounting of the ITL monitoring system and satellite.

- Digital multi-meter capable of reading 600VAC/DC (Fluke 177 or 179)
- Nut Drivers and Sockets
- #2 Phillips Screwdriver
- 5/16 Flat Head screwdriver
- Crimp Tool
- Needle Nose Pliers

## Quick Installation Guide

The quick start guide shows how to install the MON-9600 series monitoring systems. The guide provides only basic instructions to personnel familiar with these types of installations. For more details, refer to this document.

- Remove packaging material
- Determine make of existing tower lighting controller and select appropriate installation diagram from this manual
- Connect MON-9600 to tower lighting controller to be monitored using supplied harness
- Apply power to unit
- All input LEDs should be on solid or blinking
- Determine unit's IP number from either the LCD display
- Use web browser to configure basic network settings

## Mounting Enclosure Panel

The MON-9600 should be mounted to a properly grounded H-frame or a structure which provides a direct low impedance connection to earth ground.

The mounting cannot obstruct access to the monitoring system's internal components for the purpose of installing and maintaining the equipment. The following diagrams detail the mounting dimensions and clearance for proper access.

### Mounting Details for the Enclosure Panel

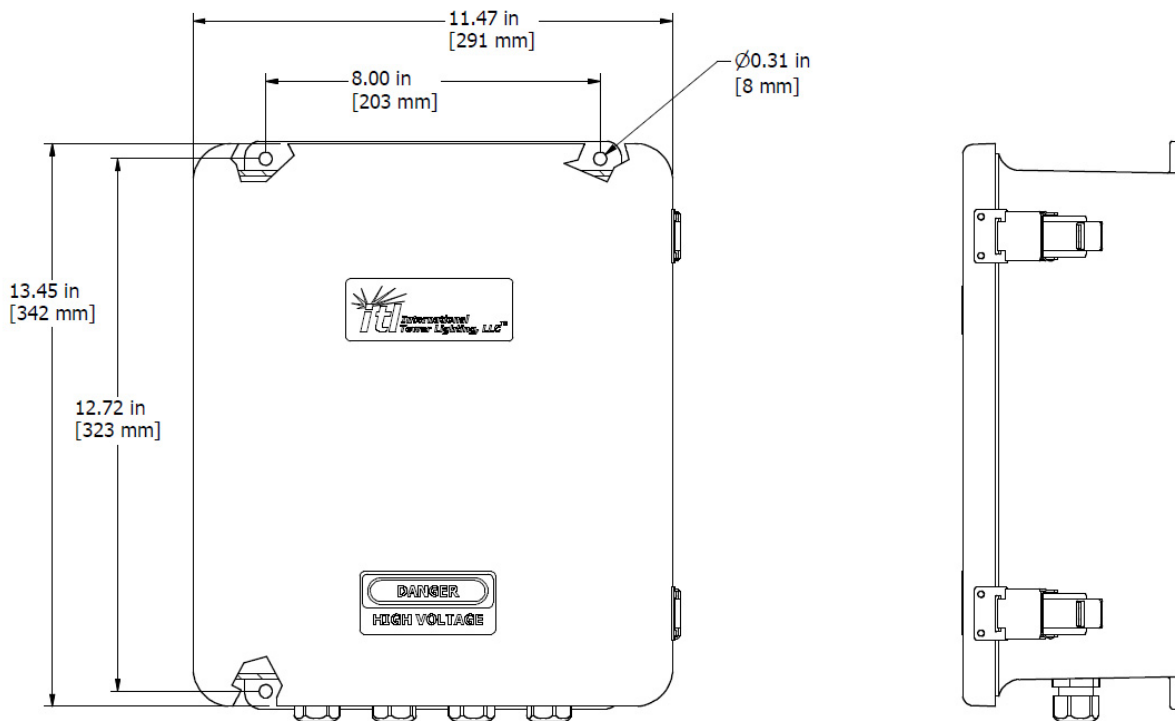


Figure 1: Mounting Details and Dimensions of Enclosure Panel



## Circuit Board

The following sections detail the MON-9600 internal circuit board assembly.

### 1. ITL-9600 Circuit Board Assembly


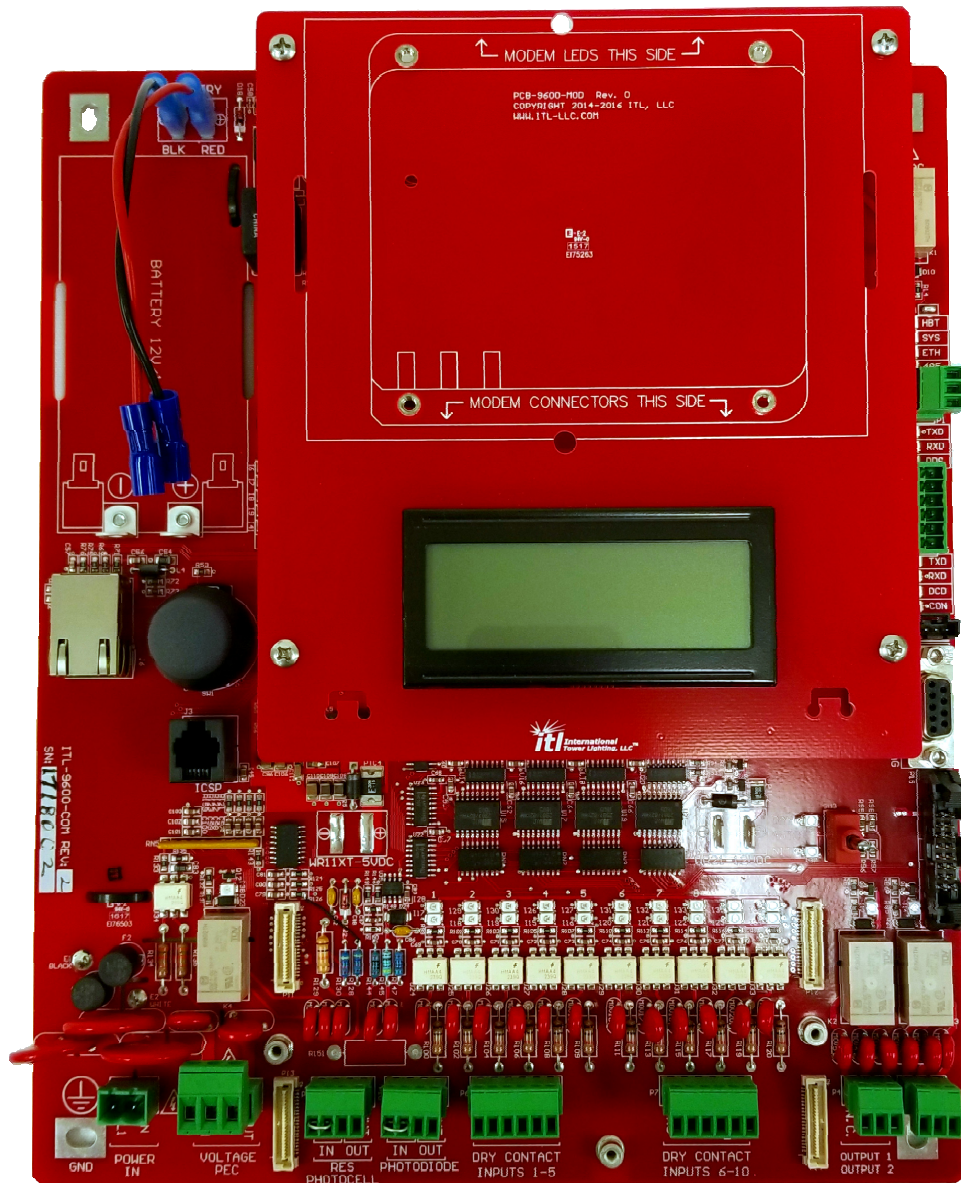


Figure 2: ITL-9600 Circuit Board

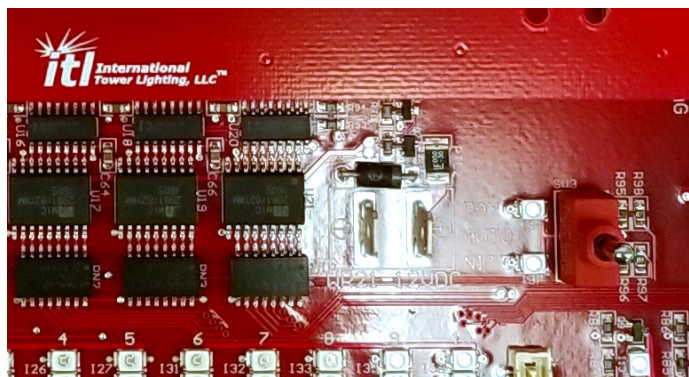

## 2. LED Indicators

### A. Mode

The Day/Nite LEDs will indicate the actual operating mode of the MON-9600. Under normal conditions the board will follow the state of the PEC and/or Photocell inputs.

For diagnostics purposes the normal operating mode can be changed manually with the on-board Manual Mode Switch. The board will follow the Manual Mode Switch if it is not in Auto mode and blink the corresponding LEDs, indicating that it is no longer in auto mode. The Manual Mode Switch will automatically time out after 8 hours, the LEDs will stop blinking, and the board will revert to following the PEC, Photodiode or Photocell inputs. The MON-9600's operating mode can also be overridden remotely in which case the LEDs will also blink. This special mode will not time out since it can be changed remotely.

Both special modes will through an exception, i.e. send SNMP traps if enabled, and/or report alarms to ADP if available.

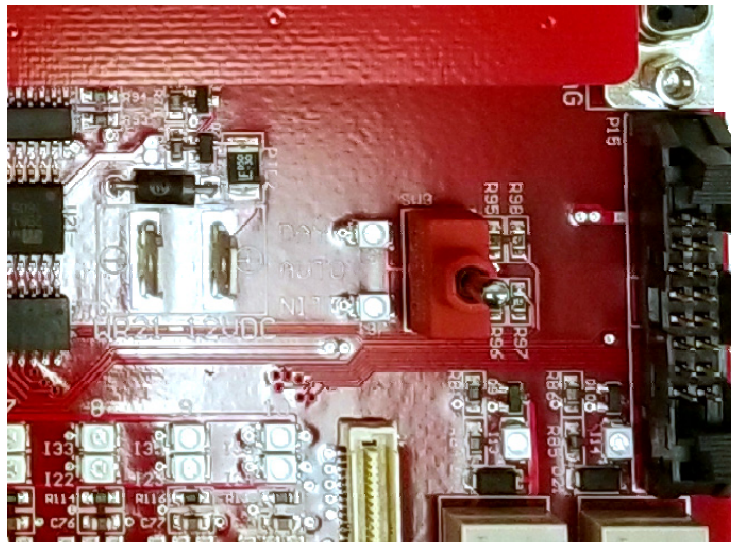


Figure 6: ITL-9600 Communication Status LEDs



## B. Inputs and Output Relays

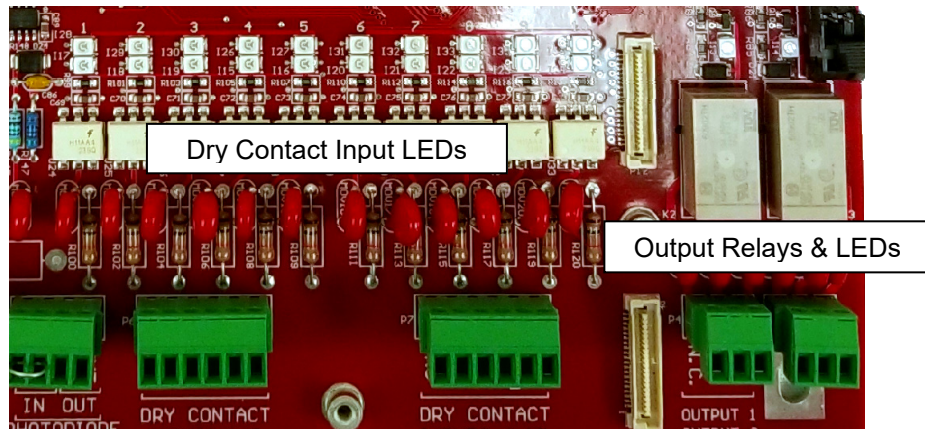


Figure 7: ITL-9600 Dry Contact Input LEDs, Output Relays & LEDs

## C. Indicator Function

Description	Function
INPUTS 1-10	Flashing Red – Alarm Steady Green – No Alarm Off – Disabled
OUTPUTS 1 & 2	On when output relay energized
DAY MODE	Steady – Day mode via connected light sensor Flashing – Day mode via remote/manual mode over-ride
NITE MODE	Steady – Night mode via connected light sensor Flashing – Night mode via remote/manual mode over-ride

## Input Connections

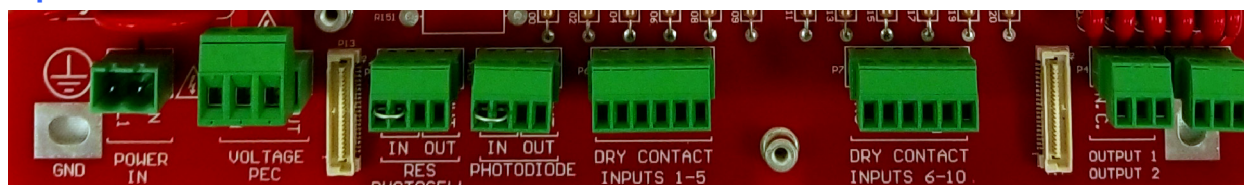


Figure 8: ITL-9600 Connections

## Web Pages

The MON-9600 includes a web graphical user interface (GUI). The GUI can be accessed with most web browsers by directly typing in the device's IP address into the browser's address bar. The IP address is indicated on the MON-9600's on-board the LCD display. An example on how to access the product via a web browser is shown below:

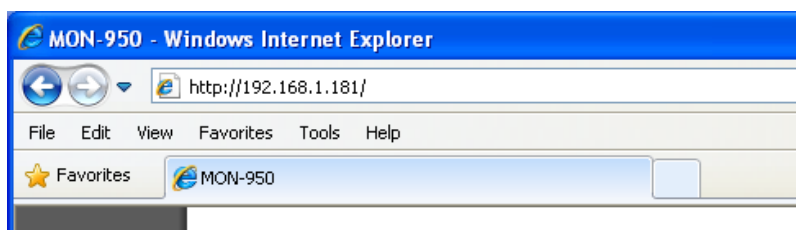


Figure 9: Web Browser Address Bar

## Alarm Page

itl ALARMS STATUS MODE / PEC CONFIG IP SETTINGS		
Monitoring Panel		Alarms 6 MON
Inputs 1 ... 10		
Red LED Beacon, Top	Closed	none
Red LED Beacon, Mid	Open	7/27/2018 12:17
Red LED Beacon, Bot	Open	7/27/2018 12:17
PEC Alarm	Open	7/27/2018 12:17
Day/Night Mode	Open	7/27/2018 12:17
disabled	Open	none
disabled	Open	none
disabled	Open	none
disabled	Open	none
disabled	Open	none


Figure 10: Alarms Page

The alarm page contains status of all input alarms, along with power, battery, remote override and PEC/Photocell/Photodiode status. Each entry will either indicate 'none' if no alarm exists or a timestamp when the alarm occurred. Additionally, an either *Open* or *Closed* state is indicated where applicable.

Alarms can be reset from this page.

The Alarm descriptions match the selections from the Input Configuration page. Table entries which are grayed indicate disabled inputs.

## Mode/PEC



ALARMS
STATUS
**MODE / PEC**
CONFIG
IP SETTINGS

Monitoring Panel

Alarms

6

MON

---

### Mode / PEC

Current Operating Mode	Day
Voltage PEC	Day
Resistive Photocell	Day
Photodiode	Day
Manual Mode Switch	Auto

Remote Override	Auto	<input checked="" type="radio"/>
	Day	<input type="radio"/>
	Night	<input type="radio"/>
	Duration (Hrs/Min)	0 ▾ / 0 ▾

Last Day to Night Transition	none
Last Night to Day Transition	none
Last Controller Reset	7/27/2018 12:28

PEC Alarm Enabled

Apply


Auto Refresh (5 min)

*Figure 11: Mode/PEC Page*

The Mode/PEC page displays the system's operating mode along with PEC, Photocell, Photodiode, Manual Mode Switch and Remote Override Status. The system's mode can be changed remotely through this page if needed for test purposes or in case of a PEC/Photocell failure.

The page also indicates the last time the system switched from Day to Night Mode, Night to Day Mode and the last time power has been restored to the controller.


## Configuration – Monitoring Panel

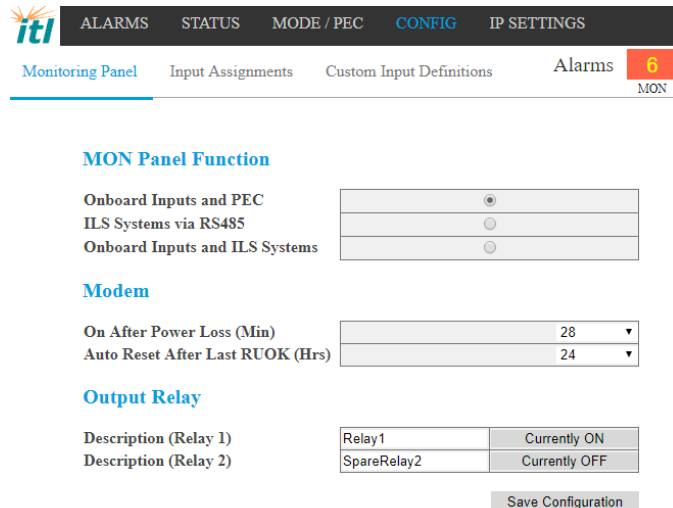

The screenshot shows the 'CONFIG' tab selected in the top navigation bar. Below the navigation bar, the 'Monitoring Panel' sub-tab is active. The main content area is titled 'MON Panel Function' and contains three radio button options: 'Onboard Inputs and PEC' (selected), 'ILS Systems via RS485', and 'Onboard Inputs and ILS Systems'. Below this is the 'Modem' section with two dropdown menus: 'On After Power Loss (Min)' set to 28 and 'Auto Reset After Last RUOK (Hrs)' set to 24. The 'Output Relay' section shows 'Relay1' as 'Currently ON' and 'SpareRelay2' as 'Currently OFF'. A 'Save Configuration' button is at the bottom right.

- The Monitoring Panel Configuration allow the change of the panels main function, modem timeouts and control of the output relay states.

## Configuration – Input Assignments

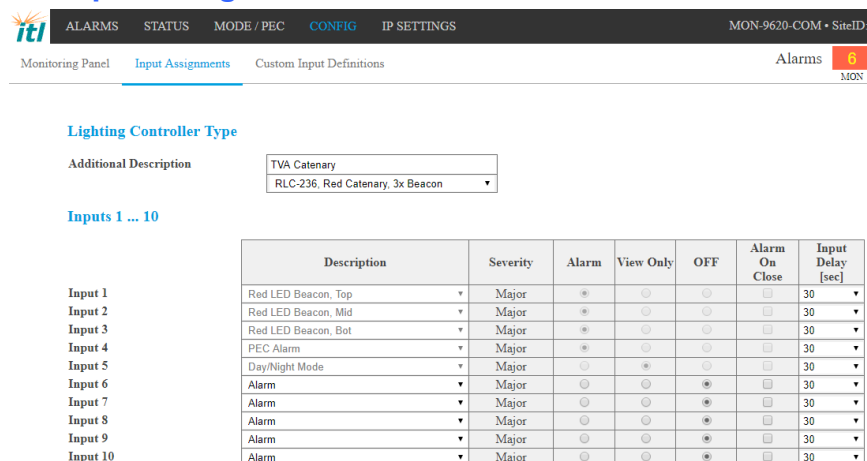


The screenshot shows the 'CONFIG' tab with the 'Input Assignments' sub-tab selected. The 'Lighting Controller Type' dropdown is set to 'TVA Catenary'. Below it, the 'Inputs 1 ... 10' section displays a table of input assignments.

	Description	Severity	Alarm	View Only	OFF	Alarm On Close	Input Delay [sec]
Input 1	Red LED Beacon, Top	Major	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	30
Input 2	Red LED Beacon, Mid	Major	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	30
Input 3	Red LED Beacon, Bot	Major	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	30
Input 4	PEC Alarm	Major	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	30
Input 5	Day/Night Mode	Major	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="checkbox"/>	30
Input 6	Alarm	Major	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	30
Input 7	Alarm	Major	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	30
Input 8	Alarm	Major	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	30
Input 9	Alarm	Major	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	30
Input 10	Alarm	Major	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="checkbox"/>	30

- The Input Configuration page provides access to the MON-9600's built-in templates for selecting different manufactures' lighting systems to match this manual's included installation diagrams. Once a template has been selected those inputs cannot be further changed with the exception of the Input Delay. All remaining unused inputs can be disabled or assigned to monitor additional devices' dry contacts.
- Custom Input Strings that have been saved will be listed in the top ten spots of the Menus on each input.
- Copper Theft alarm will take over the contact for Output 2 giving connections for user supplied external sirens and/or lights.

## Configuration - Custom Input Definitions

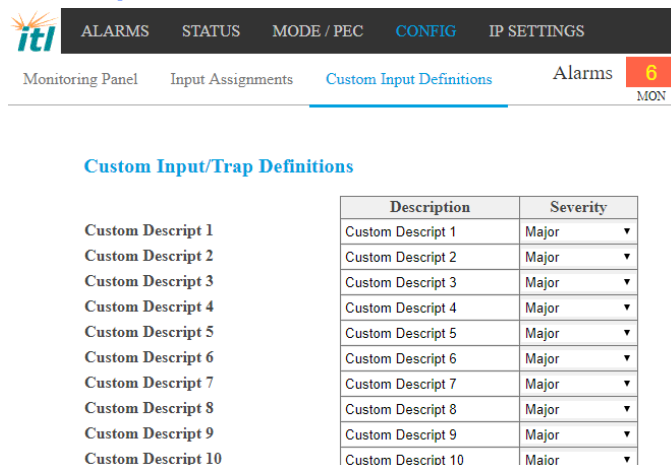


The screenshot shows the 'Custom Input Definitions' page. At the top, there is a navigation bar with tabs: ALARMS, STATUS, MODE / PEC, CONFIG, and IP SETTINGS. Below this, a sub-navigation bar shows 'Monitoring Panel', 'Input Assignments', 'Custom Input Definitions' (which is highlighted), and 'Alarms'. On the right, there is a red box indicating '6' alarms and 'MON' status. The main content area is titled 'Custom Input/Trap Definitions' and contains a table with 10 rows, each representing a custom description and its severity.

	Description	Severity
Custom Descript 1	Custom Descript 1	Major ▼
Custom Descript 2	Custom Descript 2	Major ▼
Custom Descript 3	Custom Descript 3	Major ▼
Custom Descript 4	Custom Descript 4	Major ▼
Custom Descript 5	Custom Descript 5	Major ▼
Custom Descript 6	Custom Descript 6	Major ▼
Custom Descript 7	Custom Descript 7	Major ▼
Custom Descript 8	Custom Descript 8	Major ▼
Custom Descript 9	Custom Descript 9	Major ▼
Custom Descript 10	Custom Descript 10	Major ▼

The Custom Input Definitions page provides access to the MON-9600's optional user defined alarm strings. If a Custom input is needed the user can name and set the severity of the input choice. Once a name and severity have been added the user must save and this will allow them to select it on the dropdown menu from the Input Configuration page.

## IP Settings - Network

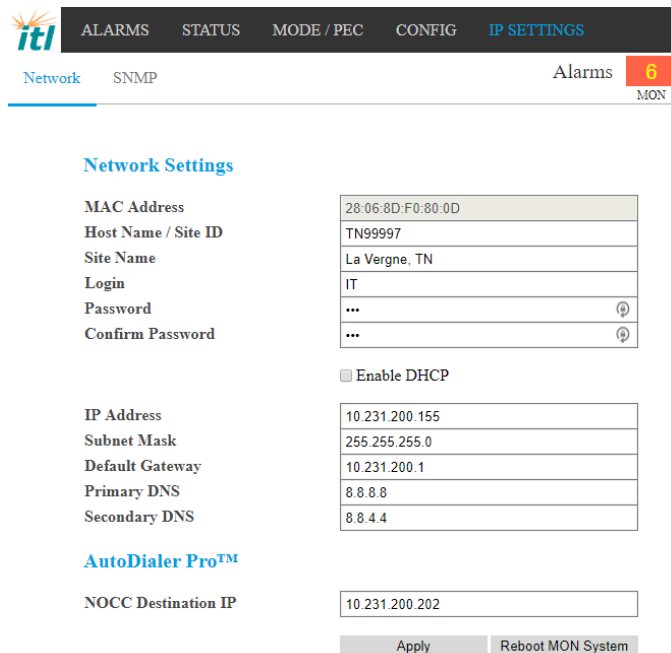

The screenshot shows the 'IP Settings - Network' page. At the top, there is a navigation bar with tabs: ALARMS, STATUS, MODE / PEC, CONFIG, and IP SETTINGS. Below this, a sub-navigation bar shows 'Network' (which is highlighted), 'SNMP', and 'Alarms'. On the right, there is a red box indicating '6' alarms and 'MON' status. The main content area is titled 'Network Settings' and contains several input fields for network configuration. Below these fields, there is a checkbox for 'Enable DHCP'. Further down, there are more input fields for network settings. At the bottom, there is a section for 'AutoDialer Pro™' with a 'NOCC Destination IP' field and two buttons: 'Apply' and 'Reboot MON System'.

MAC Address	28:06:8D:F0:80:0D
Host Name / Site ID	TN99997
Site Name	La Vergne, TN
Login	IT
Password	...
Confirm Password	...
<input type="checkbox"/> Enable DHCP	
IP Address	10.231.200.155
Subnet Mask	255.255.255.0
Default Gateway	10.231.200.1
Primary DNS	8.8.8.8
Secondary DNS	8.8.4.4
<b>AutoDialer Pro™</b>	
NOCC Destination IP	10.231.200.202
<input type="button" value="Apply"/> <input type="button" value="Reboot MON System"/>	

*Figure 12: IP Settings – Network Page*

This page provides access to the basic network settings. The *Host Name / Site ID* and *Site Name* are both included for reporting verbose SNMP traps. The Default IP Address is 192.168.1.195.



## SNMP Configuration



The screenshot shows the 'IP SETTINGS' tab in the configuration menu. Below it, the 'SNMP' sub-tab is active. The 'SNMP Agent Settings' section includes two rows for 'Trap IP Address' (127.0.0.1) with an 'Enable' checkbox. The 'Read Community' section has two rows for 'String' (public). The 'Write Community' section has two rows for 'String' (twrite, private). The 'Message Format' section has two radio buttons: 'MON-950 Emulation' (selected) and 'Custom, GG'. A checkbox 'Use Verbose Traps' is checked. At the bottom are 'Apply' and 'Download MIB' buttons.

Figure 13: IP Settings - SNMP

This page allows for setting SNMP destination IP addresses for sending SNMP traps. The enable option must be checked for traps to be sent. *Enable Verbose Traps* will send SNMP traps in human readable format rather than numeric. Verbose Traps follow the format

SiteID : SiteName : AlarmDescription : Severity

Source:	192.168.1.11	Timestamp:	3 seconds	SNMP Version:	1
Enterprise:	iso.org.dod.internet.private.enterprises.itl				
Specific:	1				
Generic:	enterpriseSpecific				
Variable Bindings:					
Name:	iso.org.dod.internet.private.enterprises.itl.alarmMIB.alarmTable.alarmEntry.alarmDescription.0				
Value:	[OctetString] TN00100-A-BNA Airport 2 Power Alarm.Major				
Description:					

Figure 14: SNMP Verbose Trap

## SNMP


Besides the MON-9600's intuitive web interface the system can also act as a SNMP agent for administrators to query configuration and status of the unit.

The SNMP enabled MON-9600 supports both, SNMP v1 (RFC 1157) and community based SNMP v2c (RFC 3416) application layer protocols over User Datagram Protocol (UDP) transport layer, in order exchange information between the MON-9600 (agent) and a central SNMP manager or Network Management System (NMS).

The agent uses UDP Port 161 to respond (listen) to the SNMP manager and UDP Port 162 to send traps and notifications to the SNMP manager. Get, Get\_Bulk, Get\_Next, Set and Trap Protocol Data Units (PDUs) are supported.

## MIB

The MON-9600 reference MIB can be downloaded from the IP Settings => SNMP web page.

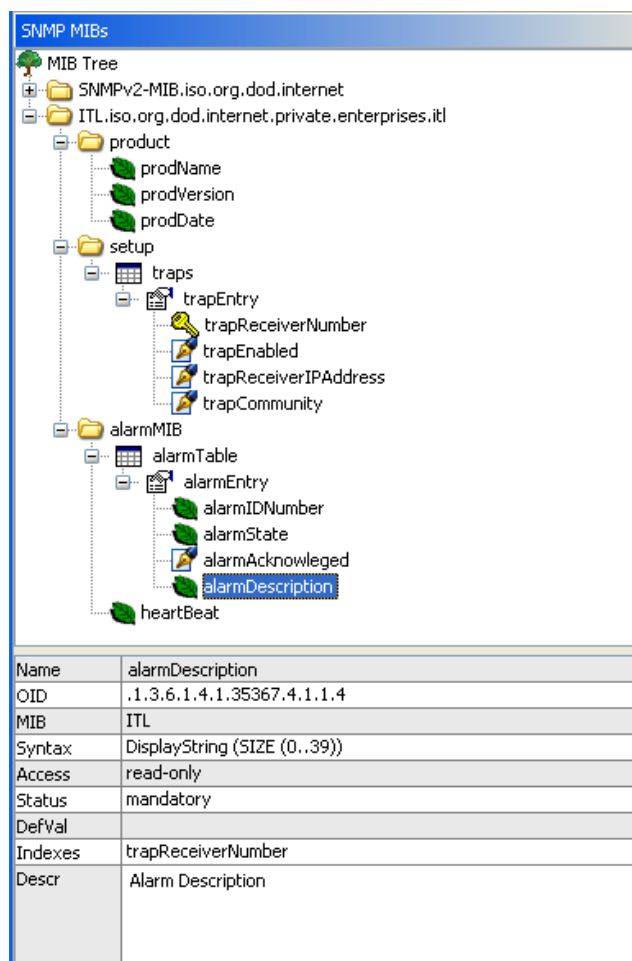

The screenshot displays the 'SNMP MIBs' web interface. It features a 'MIB Tree' on the left with a hierarchical structure. The tree includes folders for 'SNMPv2-MIB', 'ITL', 'product', 'setup', 'traps', and 'alarmMIB'. Under 'alarmMIB', there is an 'alarmTable' which contains an 'alarmEntry'. The 'alarmEntry' has several attributes: 'alarmIDNumber', 'alarmState', 'alarmAcknowledged', and 'alarmDescription'. The 'alarmDescription' attribute is highlighted with a blue box. Below the tree, a table provides details for the selected 'alarmDescription' MIB.

Name	alarmDescription
OID	.1.3.6.1.4.1.35367.4.1.1.4
MIB	ITL
Syntax	DisplayString (SIZE (0..39))
Access	read-only
Status	mandatory
DefVal	
Indexes	trapReceiverNumber
Descr	Alarm Description

## 1. Object Identifiers (OIDs) and Names

With the exception of system Object Identifiers (OIDs), all MON-9600 OIDs will start with the ITL enterprise specific group number, IEEE Organizationally Unique Identifier (OUI), 43.6.1.4.1.35367 and branch from there as indicated below. The following objects are provided.

### System OIDs

The following OIDs are read only and follow the

OID Branch: iso(1).org(3).dod(6).internet(1).mgmt(2).system(1)

<b>OID</b>	<b>Name</b>	<b>Description</b>
1.3.6.1.2.1.1.1	sysDescr	Description
1.3.6.1.2.1.1.2	sysObjectID	Object ID
1.3.6.1.2.1.1.3	sysUpTime	Up Time
1.3.6.1.2.1.1.4	sysContact	Contact
1.3.6.1.2.1.1.5	sysName	Name
1.3.6.1.2.1.1.6	sysLocation	Location
1.3.6.1.2.1.1.7	sysServices	Services

*Figure 15: System OIDs*

### Product OIDs

The following OIDs are read only.

OID Branch: iso(1).org(3).dod(6).internet(1).private(4).itl(35367)

<b>OID</b>	<b>Name</b>	<b>Description</b>
1.3.6.1.4.1.35367.1.1	prodName	Site ID
1.3.6.1.4.1.35367.1.2	prodVersion	Firmware Version
1.3.6.1.4.1.35367.1.3	prodDate	Firmware Date

*Figure 16: Product OIDs*

## Trap Setup OIDs

The MON-9600 supports sending traps to up to two destination IP addresses. Traps can be enabled and configured through a SNMP manager or the MON-9600's build-in web pages. If enabled, traps are sent for any change-of-state of MON-9600 parameters which have been configured through the web pages.

Traps are automatically retransmitted until they have been acknowledged (see Alarm OIDs). The MON-9600 will retransmit traps in the following time interval until acknowledged: 1 minute, 5 minutes, 15 minutes, 30 minutes, 1 hour, 1 hour ... for a total of 24 hours. After 24 hours the timer will be reset and the sequence will repeat in the same order as long as the event causing the trap is still present or active.

The following OIDs are read / write with the exception of the trap index which is read only.

OID Branch: iso(1).org(3).dod(6).internet(1).private(4).itl(35367)

OID	Name	Description
1.3.6.1.4.1.35367.11.1.1.1.1	trapReceiverNumber	Trap Index, 0..1
1.3.6.1.4.1.35367. 11.1.1.1.2	trapEnabled	Trap Enable, 0..1
1.3.6.1.4.1.35367. 11.1.1.1.3	trapReceiverIPAddress	Trap Destination IP, 0..1

*Figure 17: Trap Setup OIDs*

## Alarm OIDs

Only the acknowledge OID is read/write, all other OIDs are read only.

OID Branch: iso(1).org(3).dod(6).internet(1).private(4).itl(35367)

OID	Name	Description
1.3.6.1.4.1.35367.11.10.1.1.1	alarmIDNumber	Alarm Index, 1..14
1.3.6.1.4.1.35367. 11.10.1.1.2	alarmState	Alarm Active, 1..14 (0=inactive, 1=active)
1.3.6.1.4.1.35367. 11.10.1.1.3	alarmAcknowledged	Alarm Acknowledge, 1..14 (0=not acknowledged, 1=acknowledged)
1.3.6.1.4.1.35367. 11.10.1.1.4	alarmDescription	Alarm Description, ASCII string

*Figure 18: Alarm OIDs*

Alarms are acknowledged by issuing a SNMP Set to the corresponding OID. This will prevent the alarm from being resent unless the alarm re-occurs.

## Installation Diagrams

The following section details various installation diagrams for connecting the MON-9600 to a wide variety of existing lighting systems. Please refer to the diagram which matches your lighting system at the tower site.

### ILS-1700-CAT Triple Beacon Wiring Diagram

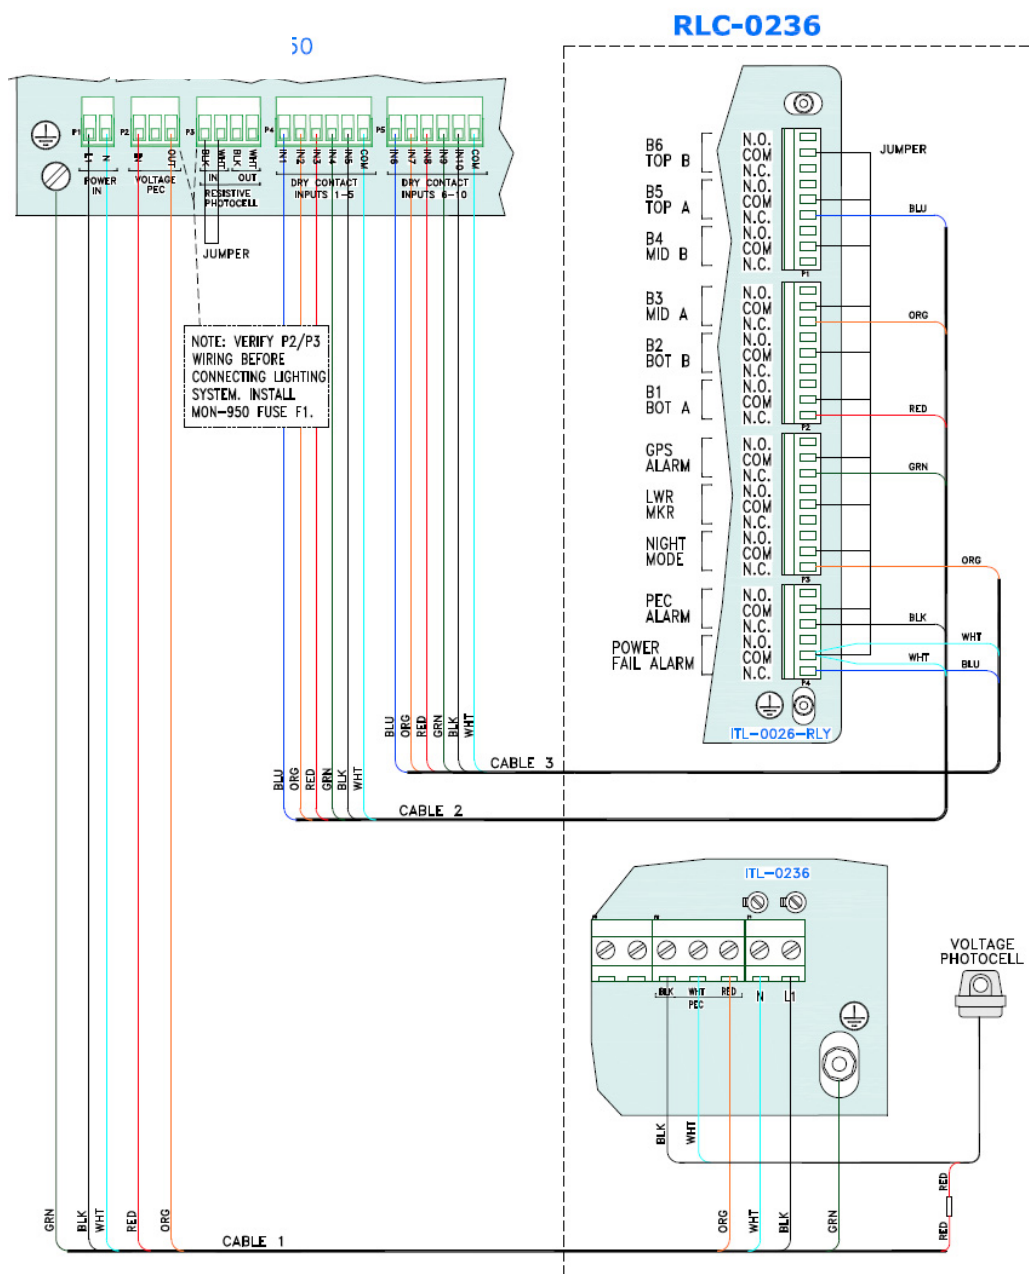


Figure 19: ILS-1700-CAT Triple Beacon Wiring Diagram

## ILS-1700-CAT Five Beacon Wiring Diagram

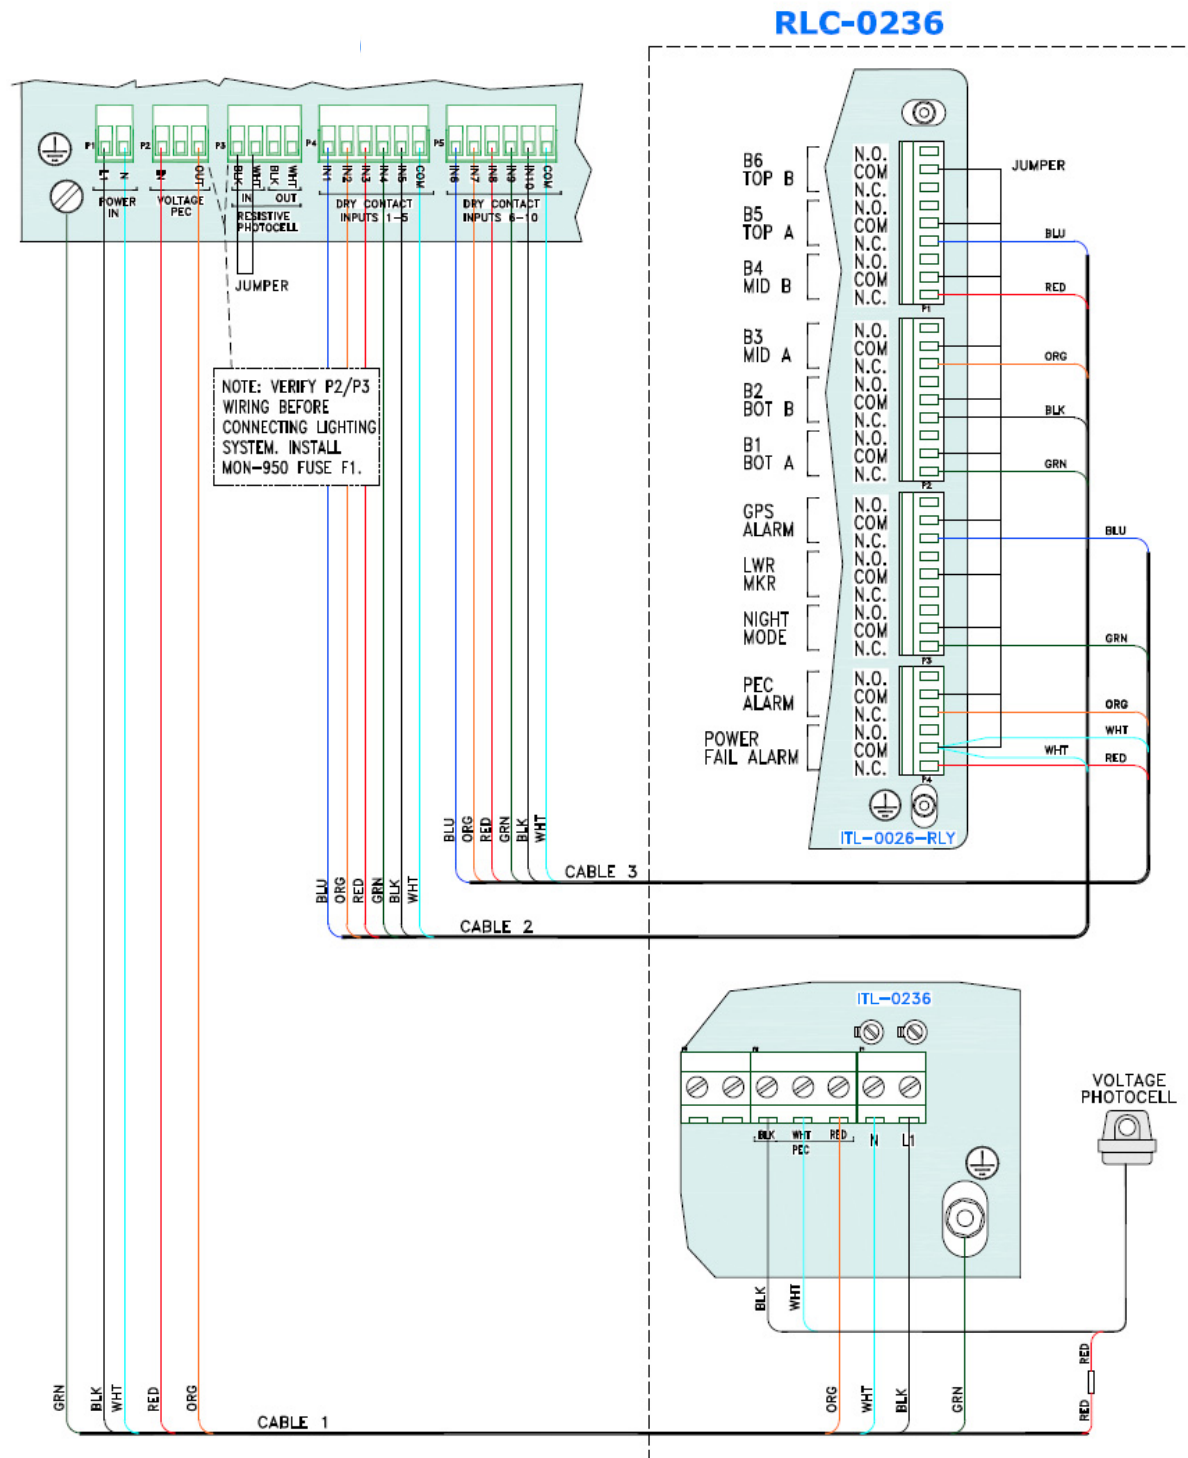


Figure 20: ILS-1700-CAT Five Beacon Wiring Diagram

**MON-9600**

**ILS-3400-01R/2600-01R**

**MON-9600**

**ILS-3400/2400**

**MON-9600**

**PC-324/312/311/310**

**MON-9600**

**FTS-370D**

## Technical Support and Contact Info

### Contact Info

For information on the ITL lighting systems' basic functions, refer to this manual and the accompanying drawings. For additional help with the installation or operation of any ITL products, please contact ITL, LLC at one of the following below.

#### Web and Internet Sites

Corporate home page: <http://www.itl-llc.com>



Monitoring System Info: <http://www.itl-llc.com/monitoring-systems.html>

#### Customer Support Technicians

8:00 AM - 5:00 PM Central Time

US and Canada call: +1-615-256-6030

Toll Free: +1-866-624-8309

Email: [support@itl-llc.com](mailto:support@itl-llc.com)

### RMA

Please contact ITL, LLC before returning equipment for repair and obtain a Return Material Authorization (RMA) number.

Revision	Description of Change	Date	Preparer / Approval
0	Created	7/27/2018	Prepared By: JGC Approved By: RSS