



Installation Instruction Manual

IFH-1710

Wind Turbine
Obstruction
Lighting System



Toll Free: +1 (866) 624-8309 • www.itl-llc.com



itl International
Tower Lighting, LLC™

Front Matter

Copyright & Trademarks

Copyright © 2009-2016 by ITL, LLC. All rights reserved. This document contains proprietary information, photographs, graphics, and other material (collectively, "the Content") protected by copyright, and this manual and all accompanying hardware, software and documentation are copyrighted. No part of this document may be photocopied or reproduced by mechanical, electronic, or other means in any form without written consent of ITL, LLC.

ITL, LLC, IFH-1710 and the ITL logo are trademarks of ITL, LLC. All other trademarks and brand names are the property of their respective proprietors.

Limited Warranty and Disclaimer

ITL, LLC guarantees that every IFH-1710 series red LED beacon is free from physical defects of material and workmanship under normal use for two (2) year from the date of purchase. If the product proves defective during this warranty period, please contact ITL, LLC in order to obtain a Return Authorization Number, RMA.

In no event shall ITL, LLC's liability exceed the price paid for the product from direct, indirect, special, incidental, or consequential damages resulting from the use of the product, its accompanying software, or its documentation. ITL, LLC makes no warranty or representation, expressed, implied, or statutory, with respect to its products or the contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose unless otherwise stated.

The technical documentation is being delivered to you AS-IS. ITL, LLC makes no warranty as to its accuracy or use. Any use of the technical documentation or the information contained therein is at the risk of the user. Documentation may include technical or other inaccuracies or typographical errors. ITL, LLC reserves the right to revise or update its products, software, or documentation without obligation to notify any individual or entity.

Please send any comments regarding the manual to support_doc@itl-llc.com.

Safety Warning



This equipment uses lethal voltages which can cause serious injury and/or death. Do not attempt to service this equipment with line power applied.

This equipment produces brilliant flashes of light. Temporary or permanent eye damage may result if looking directly at the equipment while it is operating.

Do not rely on interlock switches to remove lethal voltages from the system. Measure for voltages using a voltmeter to ensure that power is off and has been completely removed.

Do not wear any jewelry. Gold and silver are excellent conductors of electricity.

Table of Contents

The fastest way to find a specific topic is to use the detailed index in the back of the manual.

Front Matter	2
Copyright & Trademarks	2
Limited Warranty and Disclaimer	2
Safety Warning	3
List of Illustrations and Tables	5
Introduction	6
Product Description	6
Specifications	7
Environment	7
Light Output	7
Mechanical	7
Electrical	7
Installation	8
Unpacking your Lighting System	8
Tools for Installation	8
Quick Installation Guide	8
Flash Head	9
Leveling	9
IFH-1710 Flash Head Mounting	11
System Overview	12
Wiring Diagram	13
Grounding	13
Setup and Operation	15
Flash Inhibit Input (Optional)	16
Maintenance / Trouble-Shooting	17
Maintenance	17
Recommended Tools	18
Trouble-Shooting	18
Spare Parts & Replacement Parts	19
Technical Support and Contact Info	20
Contact Info	20
RMA	20

List of Illustrations and Tables

Figure 1: IFH-1710 Red LED Beacon.....	6
Figure 2: IFH-1710 Cable/Wire Identification.....	9
Figure 3: Flash Head Leveling - Axis 1.....	10
Figure 4: Flash Head Leveling - Axis 2.....	10
Figure 5: IFH-1710 Flash Head Dimensions and Mounting Detail.....	11
Figure 6: IFH-1710 Block Diagram.....	12
Figure 7: IFH-1710 Wiring Diagram.....	13
Figure 8: IFH-1710 Grounding.....	14
Figure 9: ITL-0720-CTL Controller Board.....	15
Figure 10: IFH-1710 Controller Board DIP Switch Settings.....	15
Figure 11: IFH-1710 Controller Board LED Indicators.....	15
Figure 12: IFH-1710 Replacement Parts Detail.....	19
Figure 13: IFH-1710 Flash Head Parts List Table.....	19

Introduction

Congratulations, and thank you for choosing an ITL lighting system component.

We trust that ITL's reputation for technical excellence, experience in product development, commitment to our customers and testing will ensure your complete satisfaction.

You have chosen one of the most technologically innovative lighting components available on the market today. This product is the result of many years of engineering with extensive input from field service personnel.

This manual covers the IFH-1710-000. Please take the time to read and familiarize yourself with this manual. It contains the information necessary to install, test and troubleshoot the flash head.

Product Description

The IFH-1710, FAA type L-864(L), is a medium intensity flashing beacon as defined by the FAA's advisory circular, AC150-5345-43F. The IFH-1710 meets or exceeds the specifications as defined in the advisory circular. For more information on those specifications, please refer directly to the FAA website www.faa.gov/airports/airtraffic/airports.

The IFH-1710 is a complete L-864(L) red lighting system containing an integral controller and photocell. The IFH-1710 can be set for either 20 or 30 flashes per minute (FPM) using DIP switches on the controller board. The IFH-1710 comes with a 50 foot flexible power cable installed.

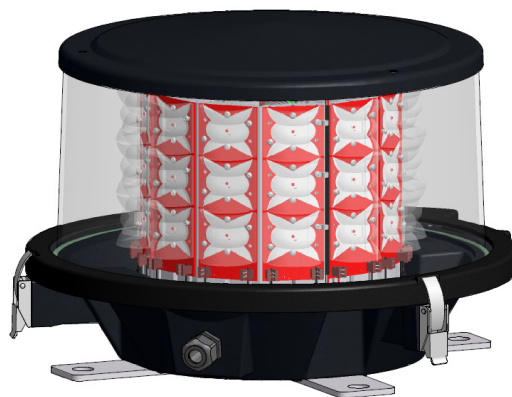


Figure 1: IFH-1710 Red LED Beacon

Specifications

ETL certified to AC150/5345-43, Type L-864(L)

Environment

Temperature	-40°C to +55°C
Humidity	less than 95% relative humidity (non-condensing)

Light Output

Night Intensity	2,000 +/-25% effective candelas
Beam Pattern	360° horizontal, ≥3° vertical

Mechanical

Dimension	Height: 11" (28cm)
	Diameter: 16.5" (42cm)
Weight	28lbs (13Kg) max

Electrical

Input Power	120-240VAC, 50/60Hz
Power Consumption	23W ¹ average power, night mode. 13W ¹ average power over 24 hours ² .

(Note 1: At 25°C, 120Vac)

(Note 2: 12 Hours night mode, 12 Hours day mode)

Installation

The following section describes how to install the lighting system.

Unpacking your Lighting System

Please examine the shipping containers and their content thoroughly upon receipt and report any potential shipping damage to the carrier.

Tools for Installation

The following tools are suggested for mounting of the ITL flash head.

- Digital multi-meter
- Nut Drivers and Sockets
- Compact “torpedo” level

Quick Installation Guide

The quick start guide shows how to install the IFH-1710 red LED beacon..

- Remove power to existing lighting system controller by turning off circuit breaker(s).
- Verify that power has been removed by measuring all input voltages using a multi-meter.
- Remove any packaging material from inside the flash head.
- Install flash head using supplied hardware.
- Connect flash head power cable (see cable/wire identification table below).
- Apply power to lighting system controller.
- Set lighting system controller to night mode operation.
- Verify that IFH-1710 flash head flashes red light at the appropriate rate.
- Verify that the IFH-1710 does not alarm while operating in night mode.
- All fixtures, enclosures and junction boxes must be mounted in the upright position.

NAME	COLOR	DESCRIPTION
L1	Black	AC Power in
N	White	Neutral
GND	Green	Chassis ground
N.C.	Orange	Alarm Normally Closed
COM	Red	Alarm Common
N.O.	Blue	Alarm Normally Open
INH+	Brown	Flash Inhibit Input*
INH-	Yellow	Flash Inhibit Input*

*Optional Flash Inhibit nput for connection to Aircraft Detection System.

Figure 2: IFH-1710 Cable/Wire Identification

Flash Head

Flash heads need to be mounted such that all four mounting feet are in direct contact with an unpainted surface in order to allow for proper grounding of the electrical components. It also needs to be mounted such that it will not obstruct access to the internal components for the purpose of installing and maintaining the equipment. The following diagrams detail the mounting dimensions and clearance for proper access.

Leveling

Flash heads need to be leveled properly for correct vertical beam spread. The following diagrams detail how to use a compact “torpedo” level on two axes to ensure that the flash head is mounted level. If the flash head mounting surface is not level already use shims to correct. Do not compromise grounding of the four flash head mounting feet.

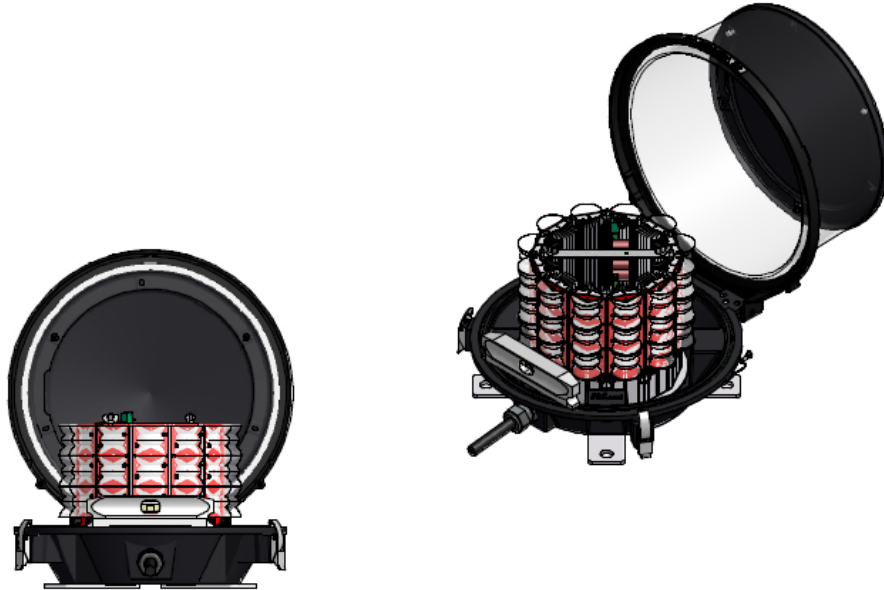


Figure 3: Flash Head Leveling - Axis 1



Figure 4: Flash Head Leveling - Axis 2

IFH-1710 Flash Head Mounting

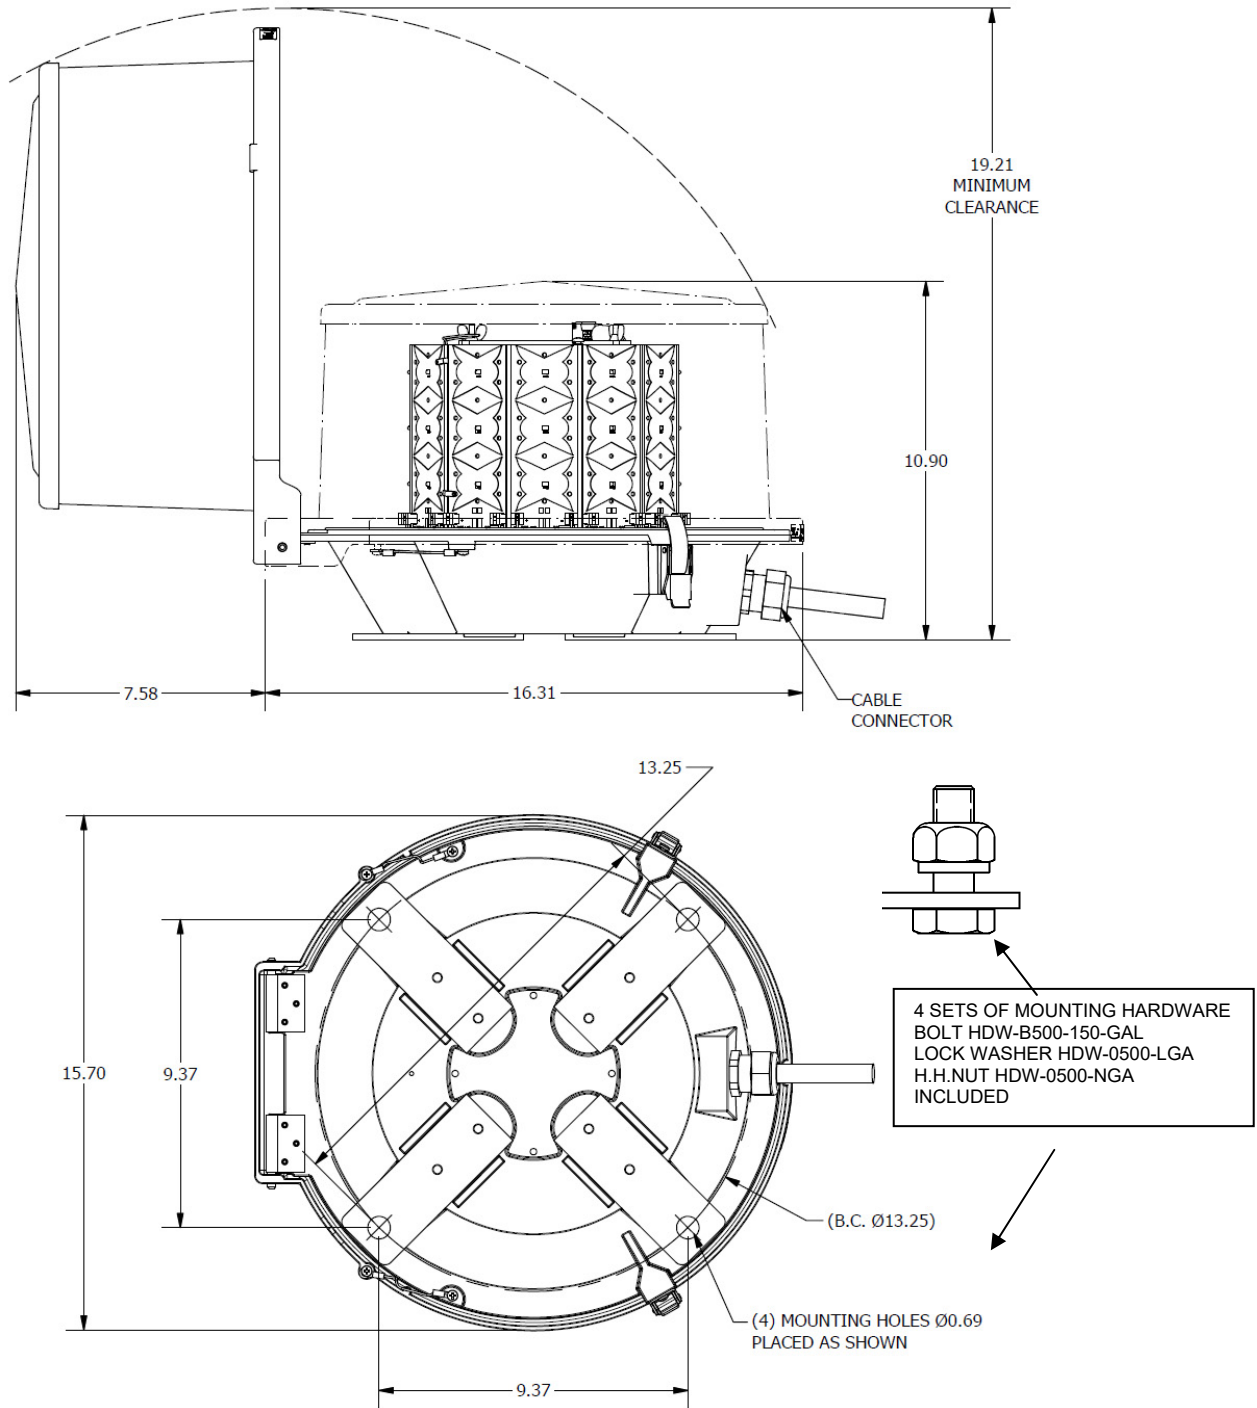


Figure 5: IFH-1710 Flash Head Dimensions and Mounting Detail

System Overview

The major components of the IFH-1710 are shown in the block diagram below. A six conductor flexible cable comes pre-installed to provide power and access to a Form-C alarm contact. The internal controller monitors an integrated photocell to determine the appropriate operating mode (day or night). In night mode the internal controller uses solid state electronics to alternate AC power to the IFH-1710 power supply at appropriately timed intervals to create the selected flash rate. IFH-1710 uses an integrated GPS receiver to determine the exact time and synchronizes the flash sequence with other IFH-1710 units or competitor's units. The AC current to the power supply is monitored and an alarm generated if the current falls below the normal operating range or if the integrated flasher circuit fails. The IFH-1710 power supply converts AC power into a controlled DC current. The controlled DC current flows through all 12 LED modules in series causing the LEDs to produce light. Each LED module contains three high power LEDs with a custom optic mounted in front of each LED. The optic focuses the light from the LED into the required beam pattern.

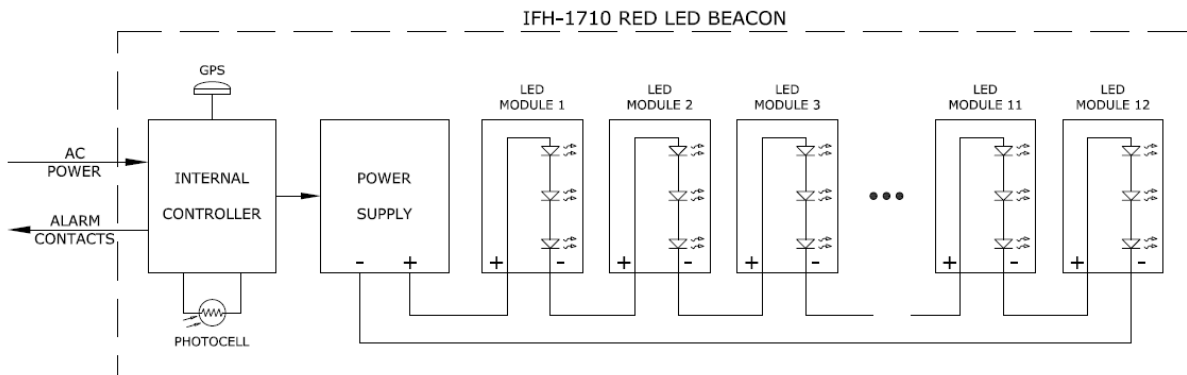


Figure 6: IFH-1710 Block Diagram

Wiring Diagram

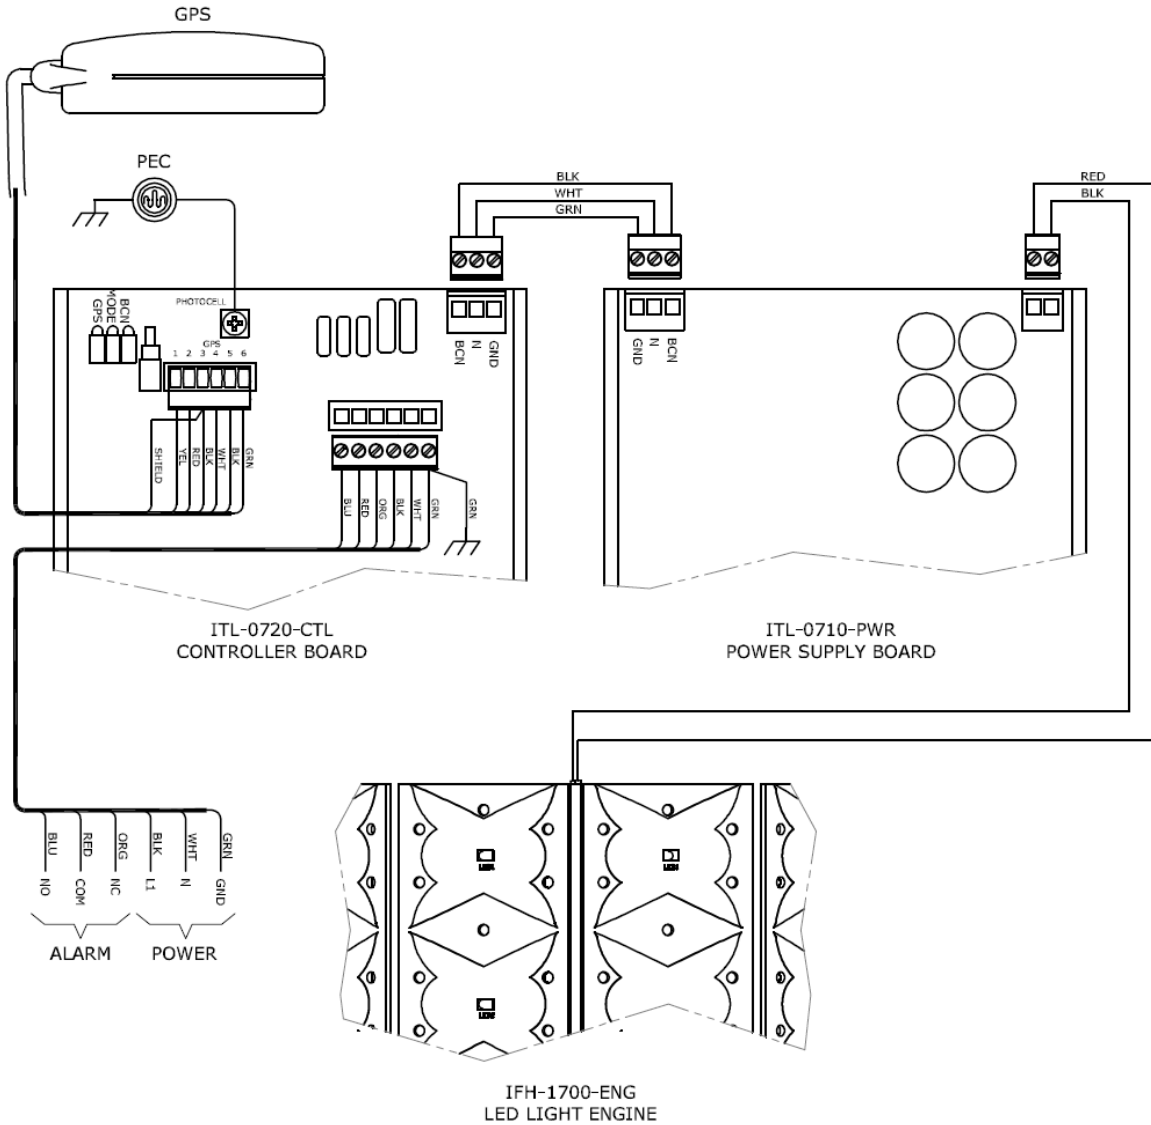


Figure 7: IFH-1710 Wiring Diagram

Grounding

The IFH-1710 should be connected to the wind turbine grounding system using a minimum AWG 6 copper conductor. Fiberglass nacelle covers are non-conductive and do not provide a ground connection.

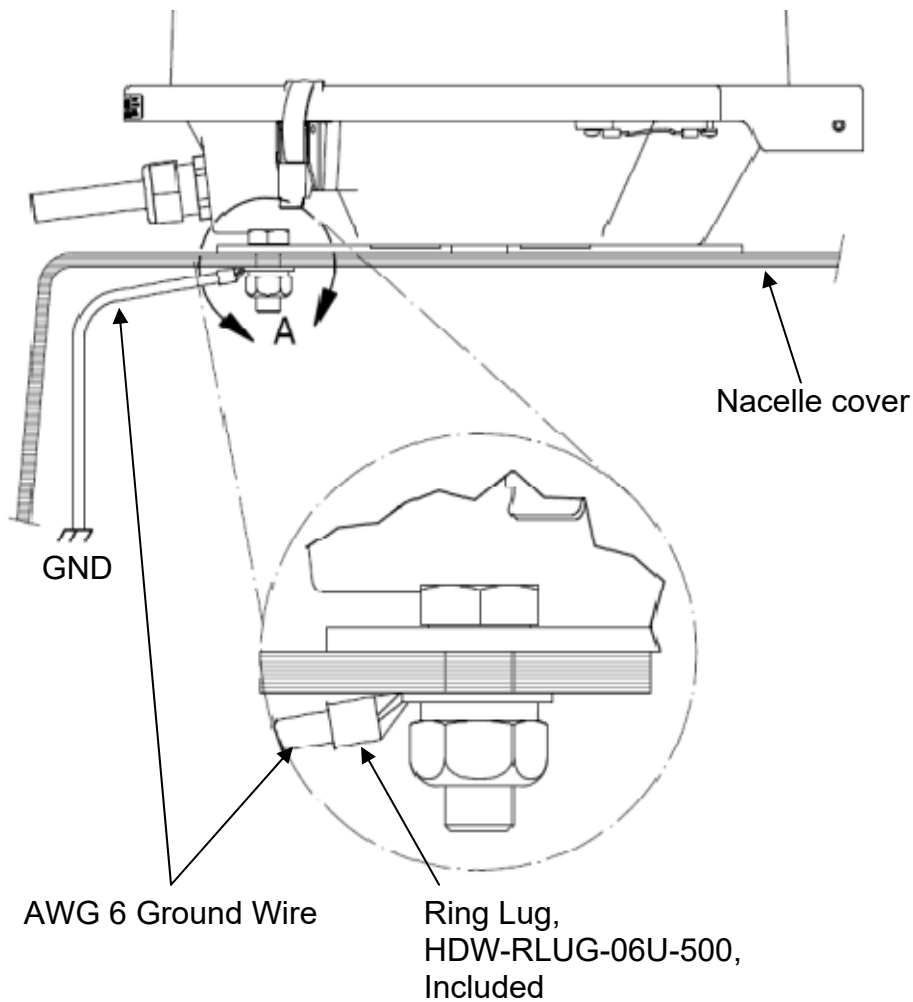


Figure 8: IFH-1710 Grounding

Setup and Operation

All setup functions are performed using the 6-position DIP switch, SW2, on the controller board. SW2 setup functions are described in the table below. Six indicator LEDs show the status of the LED beacon and GPS, as well as the operating mode. LED Indicator functions are shown in the table below.

Pressing the TEST button momentarily will cause the unit to enter night mode operation for 10 flash cycles. Holding the TEST button depressed for 3 or more flash cycles will cause an alarm to be generated for test purposes.

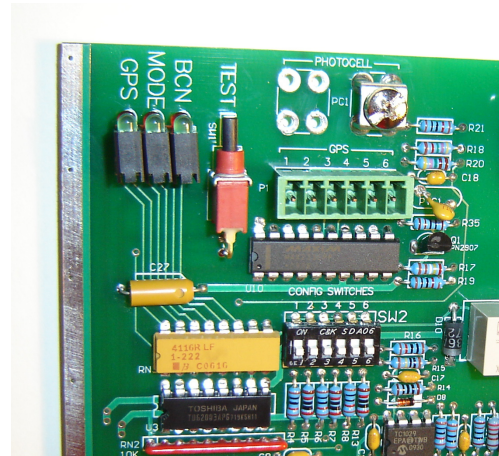


Figure 9: ITL-0720-CTL Controller Board

SW2	DESCRIPTION
1	FLASH RATE: ON - 30FPM OFF - 20FPM
2	DUTY CYCLE: ON – 67%(at 20FPM) 58%(at 30FPM) OFF - 50%
3	INHIBIT ENABLE: ON – Flash Inhibit Input Enabled OFF – Flash Inhibit Input Disabled
4	GPS ALARM: ON – GPS Alarm Enabled OFF – GPS Alarm Disabled
5	FTB-360i ON – FTB-360i Compatibility Mode OFF– Standard Operation
6	L350-864-G ON – L350-864-G Mode OFF – Standard Operation

Figure 10: IFH-1710 Controller Board DIP Switch Settings

LEDs	DESCRIPTION
BCN	GRN – Beacon Confirm RED – Beacon Alarm
MODE	GRN, FLASHING – Indicates Night Mode GRN, OFF – Indicates Day Mode RED – Mode Alarm (Photocell Alarm) GRN & RED FLASHING – Flash Inhibit Active
GPS	GRN, SOLID – GPS Fix GRN, FLASHING – GPS Acquiring RED – GPS Alarm

Figure 11: IFH-1710 Controller Board LED Indicators

Flash Inhibit Input (Optional)

A Flash Inhibit Input is available as an option for connection to an Aircraft Detection System (ADS). The input accepts 12 to 240 VAC or VDC (polarity insensitive) to inhibit flashing when no aircraft are detected by the ADS. The red and green Mode LEDs will flash to indicate flashing is inhibited. When no signal is present on the Flash Inhibit Input the IFH-1710 will operate in the mode determined by the photocell. This function must be enabled via DIP switch SW2-3.

When flashing is Inhibited, in order to verify continuing operational readiness, the IFH-1710 will perform a Readiness Test beginning around midnight Pacific Time each day. The Readiness Test will cause the IFH-1710 to operate in night mode (flashing) for approximately one minute. Should the IFH-1710 detect a malfunction during the Readiness Test, the alarm relay will activate and remain activated after the test period ends. The alarm will clear upon the next test cycle where no malfunction is detected. The alarm will also clear if the Flash Inhibit Input is de-activated or if power to IFH-1710 is cycled.

The ADS must deactivate the Flash Inhibit Input for at a minimum of one second every 24 hours. Failure of the ADS to deactivate the Flash Inhibit Input will result in the IFH-1710 resuming normal operation with the mode determined by the photocell.

- DIP Switch SW2-3 must be On to enable the Flash Inhibit Input.
- Flash Inhibit Input electrical connections are made using the Brown & Yellow wires in the flash head cable.
- The Flash Inhibit Input accepts 12 to 240 VAC or VDC to inhibit flashing.
- The Red and Green Mode LEDs flash together when flashing is inhibited.
- A Readiness Test is automatically performed once every 24 hours.
- The ADS must deactivate the Flash Enable Input once every 24 hours.

Maintenance / Trouble-Shooting

Please read section *Safety Warning* in this manual before servicing this equipment. Disconnect power to the tower lighting controller at the circuit breaker(s) before attempting maintenance/trouble-shooting.

Maintenance

The maintenance outlined below should be performed at least once annually. After 5 years of normal operation is recommended that the light engine be replaced. Periodic cleaning of the clear cover with a standard glass or acrylic cleaner is recommended

- Verify that the fixture is functional in all operating modes with no indication of an alarm condition on alarm indicator lights, alarm dry contacts, or digital monitoring interfaces.
- Verify that the photoelectric control operates the system in the correction operating mode (day/night), light color (white/red) and intensity (day/night intensity) when exposed to light and dark ambient lighting conditions.
- Inspect the fixture for any type of obstruction that could block light output at any point along the 360 degree horizontal output of the fixture. Note that multiple fixtures may be used to achieve 360 degree coverage.
- Inspect lenses and transparent covers for damage.
- Clean the fixture lens or transparent cover using a mild detergent and soft nonabrasive cloth.
- Inspect all electrical wiring connections for corrosion, arcing, damage, insulation degradation or loosening of the connection. Correct, replace or secure as needed.
- Inspect all interconnecting cables and power supply cables and conduits for damage.
- Verify the all cables are fastened securely at appropriate intervals to prevent damage.
- Inspect all electrical components for evidence of damage caused by lightning or power line induced electrical surges. Replace any components showing evidence of damage.

- Inspect fixtures and enclosures for water infiltration and insect infiltration. Replace any damaged gaskets or seals. Install plugs to close any unused conduit ports that may allow insect infiltration.
- Verify that all breathers and drain holes are clear of blockages.

Recommended Tools

The following is a list of recommended electrical equipment for troubleshooting the IFH-1710 red LED beacons.

- Digital multi-meter
- ITL-0705-TST LED Module Tester (supplied with ITL-1700-KIT)
- TOL-1700-LED Wire Installation Tool (supplied with ITL-1700-KIT)
- #2 Phillips Screwdriver (8" or longer blade length)
- Small tip (<0.1") slotted screw driver
- Needle Nose Pliers

Trouble-Shooting

Should the IFH-1710 red LED beacon fail to produce light, perform the following steps:

Verify that AC power is being supplied to IFH-1710.

Press and hold the TEST button on the controller board for two seconds. Using a digital voltmeter measure the AC voltage on controller board from P3-3 to P3-2 (black to white). For 10 flash cycles after pressing TEST the controller should enter night mode operation. The MODE indicator LED should flash during this time. The controller board should produce a pulsing AC voltage on P3. If this fails to happen replace the controller board.

Using a digital multi-meter measure the DC voltage from P2-1 to P2-2 (red to black) on the power supply board. Normal operating voltage is 65 to 100VDC.

- A voltage near 180V indicates that one of the twelve LED modules may have failed. Use an ITL-0705-TST Tester to check each LED module and replace as necessary. If an LED module has failed, check for and replace any damaged optics on that module. Be sure that the optics snap into the alignment holes on the LED modules during replacement.
- A voltage under 65V indicates that the power supply may have failed. Replace fuse F1 on the power supply board or replace the power supply board.

Spare Parts & Replacement Parts

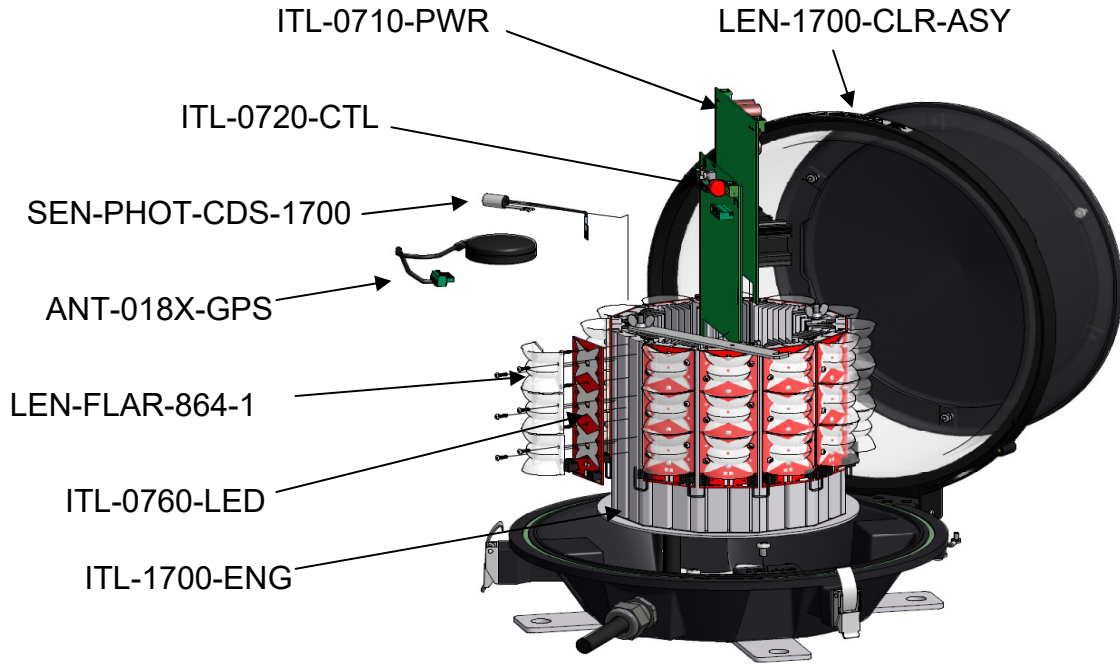


Figure 12: IFH-1710 Replacement Parts Detail

PART NUMBER	DESCRIPTION
ITL-1700-ENG	LIGHT ENGINE (Power Supply & Controller Boards not included)
ITL-0710-PWR	POWER SUPPLY BOARD
ITL-0720-CTL	CONTROLLER BOARD
ITL-0760-LED	LED MODULE
ITL-0705-TST	LED TESTER
SEN-PHOT-CDCS-1700	PHOTOCELL
ANT-018X-GPS	GPS
LEN-FLAR-864-1	LED OPTIC
LEN-1700-CLR-ASY	CLEAR LENS ASSEMBLY WITH MOUNTING RING AND COVER FOR IFH-1710
TOL-1700-LED	WIRE INSERTION TOOL
KIT-1700-LED	REPAIR KIT. Kit includes one ITL-0760-LED LED module, one LEN-1700-864-1 optic, one ITL-0705-TST LED module tester and one TOL-1700-LED wire installation tool.

Figure 13: IFH-1710 Flash Head Parts List Table

Technical Support and Contact Info

Contact Info

For information on the ITL lighting systems' basic functions, refer to this manual and the accompanying drawings. For additional help with the installation or operation of any ITL products, please contact ITL, LLC at one of the following below.

Web and Internet Sites

Corporate home page: <http://www.itl-llc.com>



Customer Support Technicians

8:00 AM - 5:00 PM Central Time

US and Canada call: +1-615-256-6030

Toll Free: +1-866-624-8309

Email: support@itl-llc.com

RMA

Please contact ITL, LLC before returning equipment for repair and obtain a Return Material Authorization (RMA) number.

Revision	Description of Change	Date	Preparer / Approval
12	Updated Figure 11.	8/24/2016	Prepared By: Elke Hinson Approved By: Andy Rudolph
11	Added description of optional Flash Inhibit Input.	5/4/2016	Prepared By: Elke Hinson Approved By: Andy Rudolph
10	Corrected flash rate switch description for SW2.	4/13/2016	Prepared By: Elke Hinson Approved By: Andy Rudolph
9	Updated power consumption specifications.	12/8/2015	Prepared By: Elke Hinson Approved By: Andy Rudolph
8	Updated Flash Head Dimensions and Mounting Detail	8/4/2015	Prepared By: Elke Hinson Approved By: Andy Rudolph
7	Replaced ITL-1700-KIT with KIT-1700-LED & updated description (Figure 12 Flash Head Parts List Table)	5/12/2015	Prepared By: Elke Hinson Approved By: Andy Rudolph
6	Added installation note "All fixtures, enclosures and junction boxes ...", Added maintenance outline.	8/29/2014	Prepared By: Elke Hinson Approved By: Andy Rudolph
5c	Corrected switch number reference SW1 to SW2 in Setup and Operation	10/23/2013	Prepared By: Elke Hinson Approved By: Andy Rudolph
5a/b	Change coversheet description from ILS-1710 to IFH-1710, updated voltage in trouble-shooting section,	9/04/2012	Prepared By: Elke Hinson Approved By: Andy Rudolph
5	Updated FAA type from L-864 to L-864(L), Changed length of cable from 75ft to 50ft.	6/25/2012	Prepared By: Elke Hinson Approved By: Andy Rudolph
4	Updated DIP switch descriptions for SW1-5 and SW1-6	5/2/2012	Prepared By: Elke Hinson Approved By: Andy Rudolph
2a	Updated Itl logo, add Toll free number	9/20/2011	Prepared By: Elke Hinson Approved By: Andy Rudolph
2	Add wiring diagram	9/23/2010	Prepared By: Elke Hinson Approved By: Andy Rudolph
1	Issued	5/17/2010	Prepared By: Elke Hinson Approved By: Andy Rudolph